
Anchor Safe Lift Truck Mat

SPECIALTY MAT • INDOOR & OUTDOOR

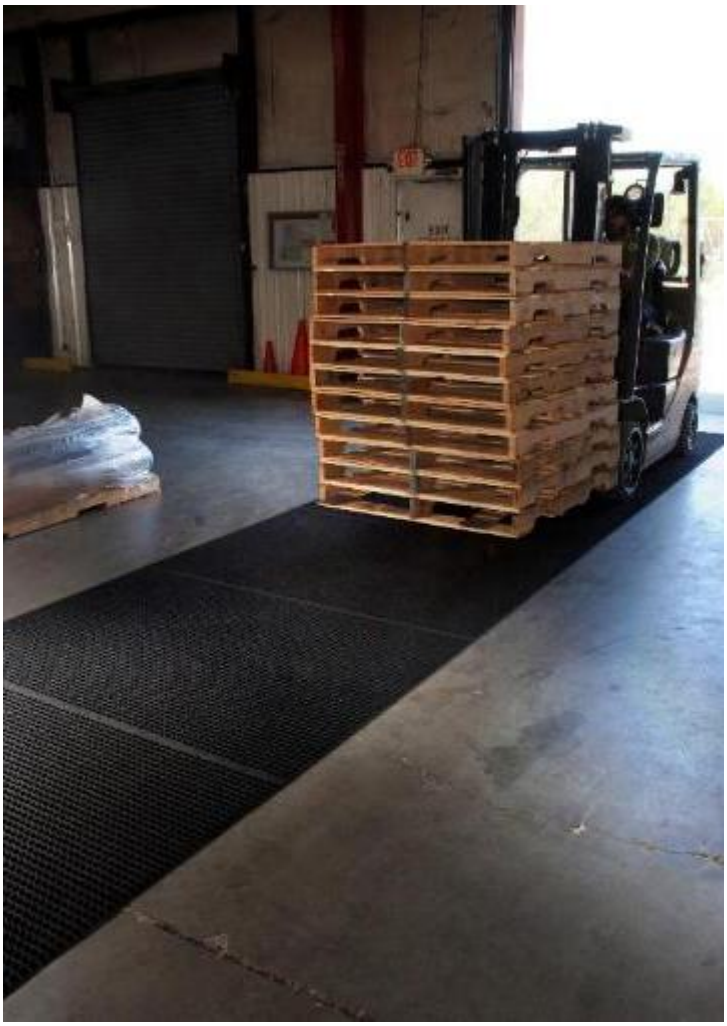







WHY CHOOSE THIS MAT?

Anchor Safe Lift Truck Mats effectively remove moisture and dirt from forklift wheels to minimize tracking and potential slip hazards. They are ideal for use in areas where forklifts enter and exit buildings.


- Bi-level surface **effectively removes moisture and dirt** from lift truck wheels to improve lift truck safety
- **Modular** mats are **easy to install** and scalable for the application
- **Safe - Aggressive adhesive taping system** keeps tiles from moving
- **Easy to clean** and fast drying
- Durable rubber backing and polypropylene carpet top withstands **lift truck traffic up to 6000 kg**
- **Eco-Friendly** - PET fabric (24 ounces/yard2) is made from at least 90% recycled content reclaimed from plastic, and SBR rubber backing contains 20% recycled rubber from car tires










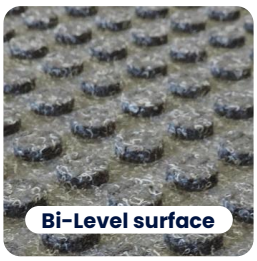

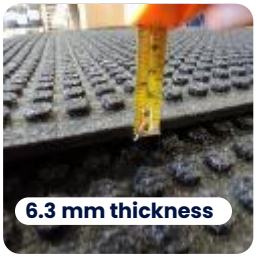

SPECIFICATIONS

Material	Solution dyed, post-consumer recycled P.E.T.
Backing	SBR Rubber that contains 20% recycled tire rubber
Other properties	• **Thickness:** 8.6 mm • **Weight**: 5 kg/m²
Safety	**Flammability:** EN13501-1 Fire Certificate
Colour	Black
Size	115 x 170 cm
Recommended use	Recommended for use in dry or wet environments where dirt, soil, water, may be present. Ideal for warehouses or any buildings where lift trucks must enter and exit to and from the outside.

CLEANING INSTRUCTIONS

Anchor Safe Lift Truck mats can be cleaned in two different ways:

1. **Vacuum** regularly with a commercial grade vacuum - A commercial-grade wet/dry vacuum is recommended for locations that encounter snow or heavy amounts of rain.
2. **Extraction cleaning** with a commercial-grade machine is the preferred method for deep cleaning the mats in place - Regularly scheduled extraction cleanings performed once every 4 to 12 weeks in heavy traffic areas will help reduce dirt and wear patterns.
3. **Pressure washing** may be used for heavy cleaning - Mats should be taken outside or to an area designated for pressure wash type cleaning. The old installation type should be removed from the floor and mat.

Hang to dry. Always make sure the mat is dry before placing it back in service.